

## PRESSURE WASHER OPERATING PROCEDURE

**Warning: Do not allow the washer pump to run more than 2 minutes when not in use. The pump will overheat resulting in damage. The couplers are rated for a maximum of 2000 psi. Do not operate the pump above 2000 psi.**

1. Locate the water tap to the left of the titration table and turn it off. Disconnect the hose which is feeding fresh water to the stage 4 riser and connect the water hose from the pressure washer. Ensure the connection is secure and turn the tap on.
2. Locate the 600 volt power outlet to the left of the titration table and connect the 600v power cable from the pressure washer to this outlet.
3. The pressure washer is on castors and can be moved to any location along the wash where work is being performed.
4. Turn the pressure washer on. The switch is located on the side of the frame.
5. Perform required work.
6. Turn pressure washer off. Turn washer tap off and pull the trigger on the wand to release the pressure from the water hoses.
7. Disconnect the water hose and the 600V cable from the outlets on the side of the wash.
8. Roll up hoses and cable and return everything to its storage location.
9. Re-connect the fresh water riser water hose to the water outlet beside titration table.

**Note: Report any unusual noises or malfunctions to Maintenance immediately.**